 




USER MANUAL

DT7330 Portable Label Printer Thermal Transfer

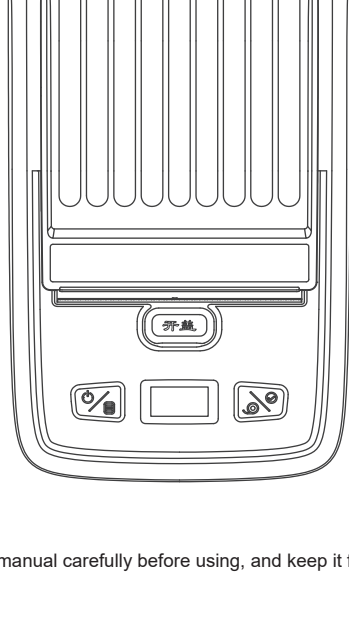

Please read the manual carefully before using, and keep it for future reference

  1. Printer Parts

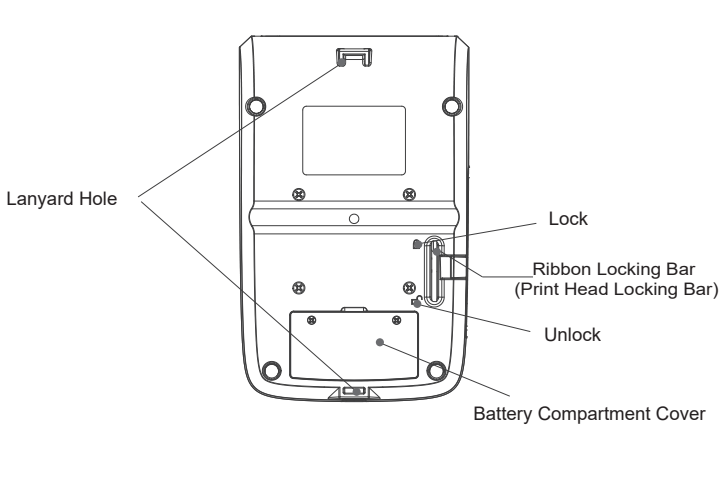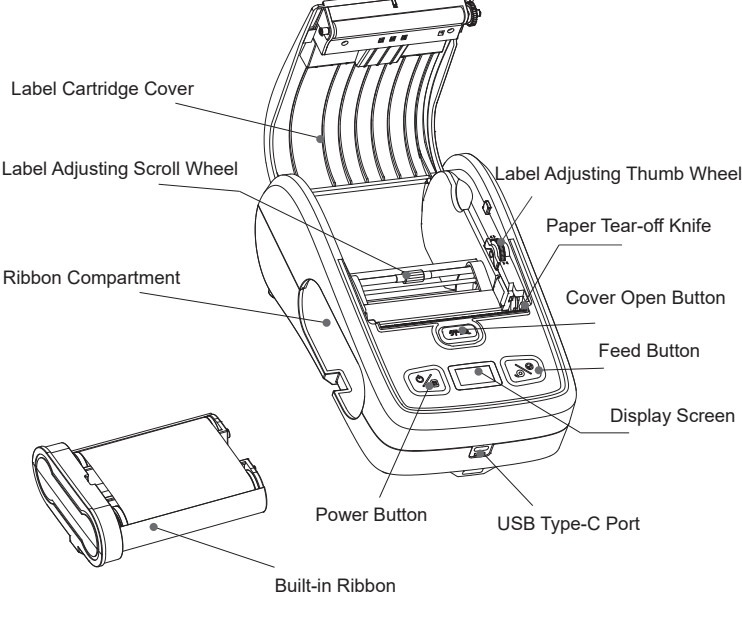

2. Basic Operation

Ribbon Installation

Take out ribbon: pull ribbon locking bar to unlock, take ribbon out.
Install ribbon: pull ribbon locking bar to unlock, insert ribbon to the bottom.

Power On the Printer

Press power button for 1.5s to turn the printer on.

Label Roll Installation

Label size: printable side outward, max roll diameter 75mm. Label width 28 to 90mm (including body paper).
Install label roll: Press "Cover Open Button" to open top cover, spin the "Label Adjusting Thumb Wheel" to fix the label, put in label roll, make printable side face down, slightly adjust plates (keep the distance between plate inner side and label roll outside is 0.5mm). Pull out part of the paper manually, then close the top cover.


Feed Label

Gap label/Black mark label: short press feed button to feed one label, feed several labels by long press;
Continuous paper: press feed button to start, release feed button to stop.

Auto Shutdown

Printer will shut down automatically if not used for a long period. Time of automatic shutdown can be set by setting button, default is 15 minutes.


Set Up Printer

Short press power button, printer enters setting status when the icon  appears on the top left corner of display screen, then press feed button to make corresponding options.

3. Connect the Printer

1. Install Editing Application

Scan QR Code to download label editing App (Android, iOS). Or search App name "WePrint" from Google Play or App Store.

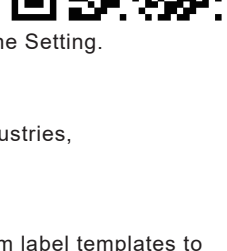

2. Connect the Printer

Connect in "WePrint" App, not from cellphone Setting.

3. Free Official Templates

Various templates available for different industries, from "Template"- "Cloud", no need to login.

4. Login (Cloud Directory)

Function of Cloud Directory is upload custom label templates to Cloud account, share among friends or colleagues. Please contact with supplier for login username and password.

4. Specifications








Display Type	TFT display	Label Size	28 ~ 90.5 mm x dia. 75 (mm)
Print Method	Thermal transfer line	Print Width	80 / 81 mm
Print Color	Black and white, others (same as ribbon color)	Label Thickness	0.05 ~ 0.2 mm
Print Resolution	300dpi	Dimension	210 x 135 x 88mm (L x W x H)
Print Speed	20 ~ 70 mm/s	Weight	960 g (including built-in ribbon)
Battery Runtime	120 ~ 150 m	Temperature	0°C ~ 45°C
Charge Time	3 ~ 4 h	Interface	USB, Bluetooth, 2.4G/5G WiFi (optional)
Ribbon Length	45 m	Command	LPAPI®

RFID Printing UHF RFID 900MHz, compatible with ISO18000-6C / EPC Gen2 (optional)

HF RFID 13.56MHz, 14443-A / 15693 / NFC (optional)

5. Safety Precautions

Please follow these guidelines during operation

-  NOTE Do not disassemble the printer by yourself. Please read this manual carefully before using.
-  WARNING Turn off the power immediately if a malfunction occurs. When the printer or charger emits smoke or smelliness, please remove the charger and battery immediately, be aware of getting burned.
-  WARNING Do not use the printer near petrol station, fuel depot or other inflammables.
-  NOTE Print head is still heated, do not touch it after printing process.
-  NOTE Please choose the original label papers, or poor printing effect and printer platen roller damage can result.
-  NOTE Please recharge the printer regularly if it is not used for a long to protect battery life.
-  NOTE Before replacing the battery, please make sure the printer turns off, or power supply is disconnected if you use a charger.

6. Maintenance

- If printer prints blurry, feed label with loud noise or foreign matters stuck on print head.
- Please make sure rubber roller is cool, then use alcohol wipe to clean rubber roller surface.

